


Solar Panel Angles for Various Latitudes

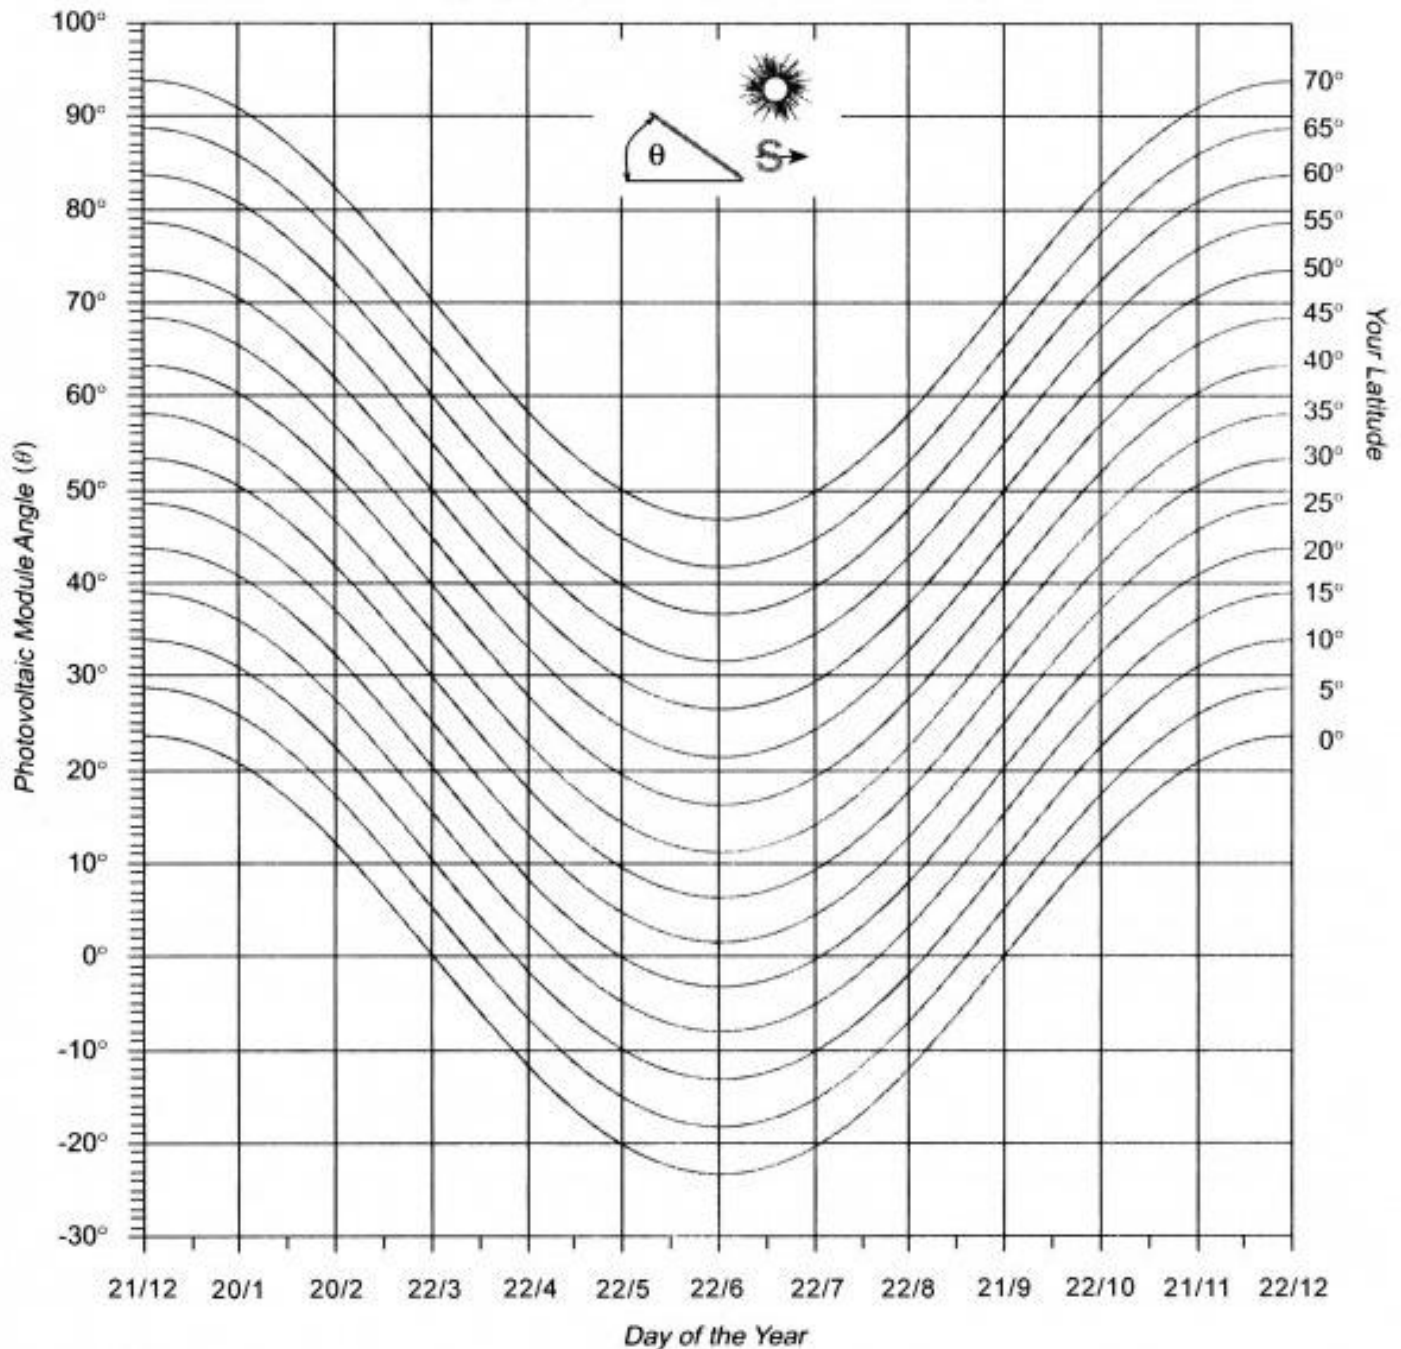

Panel angles for latitudes from 70° to -70°, negative panel angles indicate that panel is inclined to face north. Choose the line that refers to your latitude from the right-hand y-axis. Read off the angle from the left-hand y-axis that should be used for each month of the year (listed on the horizontal axis). Negative angles indicate that the panel is inclined to face north.

From ITACA, an independent, equitable and non-denominational collective that does not recognise geopolitical borders.